
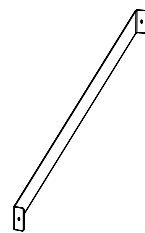



Instructions: stocubo click-in shelf

The stocubo click-in shelf consists of precision-manufactured MDF panels that can be assembled sturdily in just a few simple steps without tools, thanks to a clever click-in system.

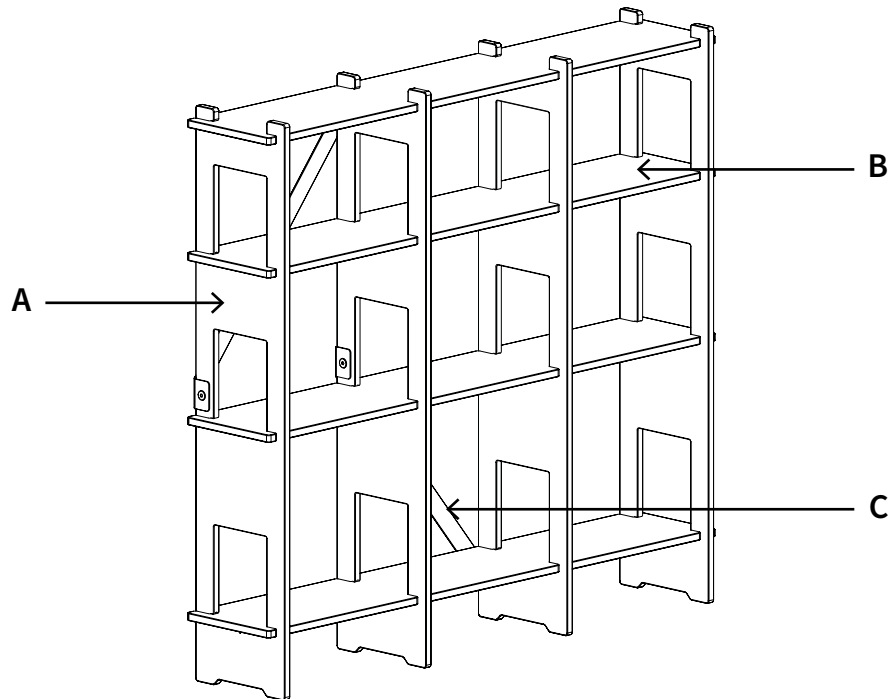

A Vertical uprights



The tall main sides of the click-in shelving unit. They support the entire structure and determine the height and division of the individual compartments.

B Horizontal shelves

The horizontal shelves. They connect the vertical uprights to one another and form the compartments.


C Stainless steel braces

The struts are fitted to the back of the shelf and ensure stability.

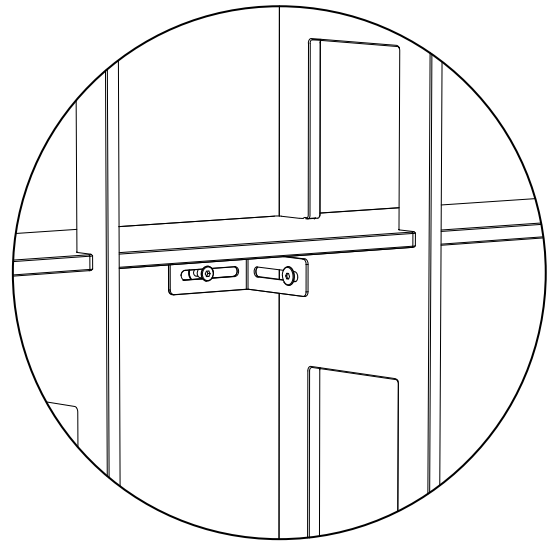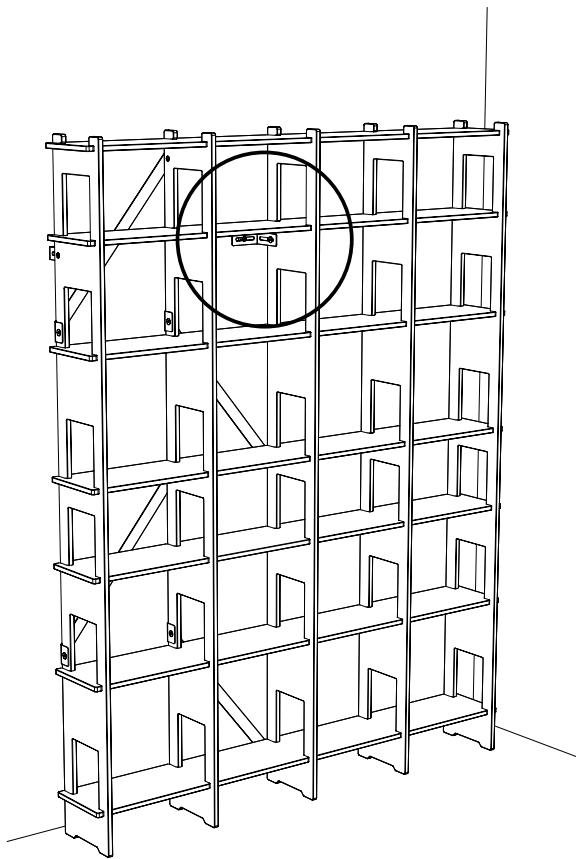

Please note:

The click-in shelves in sizes 6:2, 6:3, and 6:4 have pre-drilled holes for attaching the included anti tip brackets to prevent tipping.

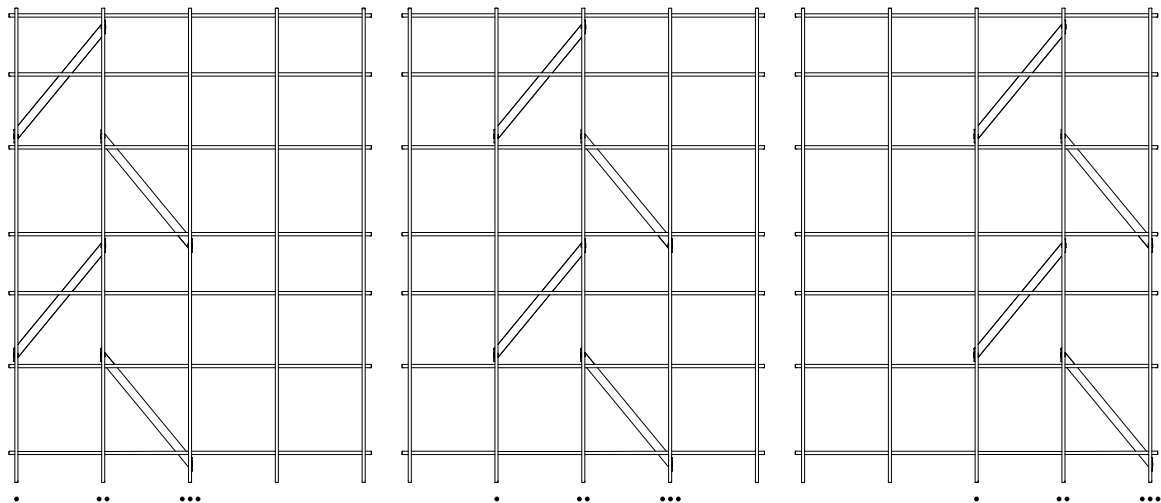



Positioning of marked and unmarked vertical uprights

The three vertical uprights marked with dots are secured using the stainless steel braces.

As shown in the picture, the stainless steel braces can be attached to the right, center, or left side of the shelf.

Tip for a relaxed assembly:

We recommend assembling the shelf ideally in a pair.

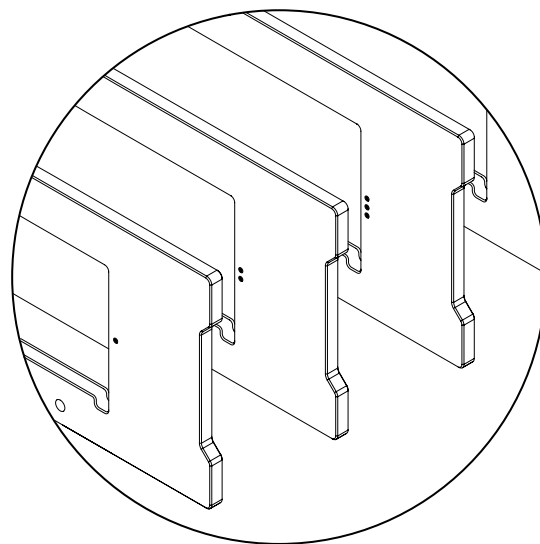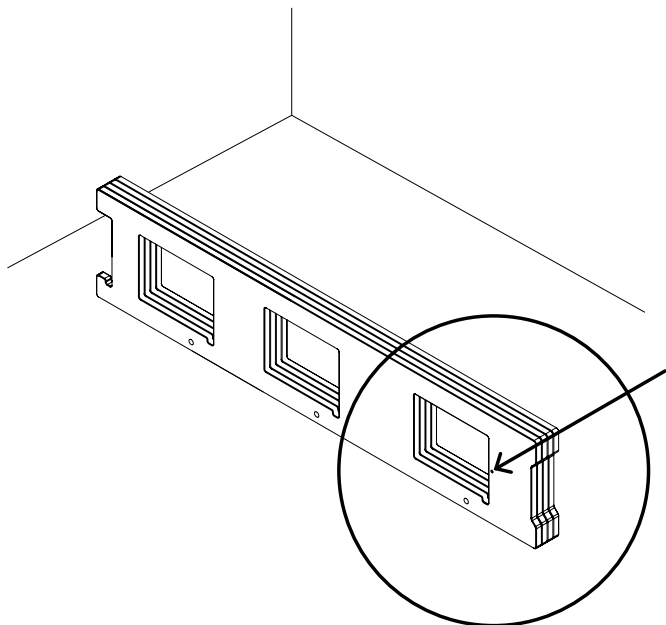


1.

Place all the vertical uprights in the correct order on their sides on a soft surface (such as carpet or cardboard).

Important:


Pay attention to the dot markings •, ••, ••• at the bottom ends of the vertical uprights.

The order must be followed. These uprights will later serve as attachment points for the diagonal stainless steel braces (see page 2 for more information before assembly).

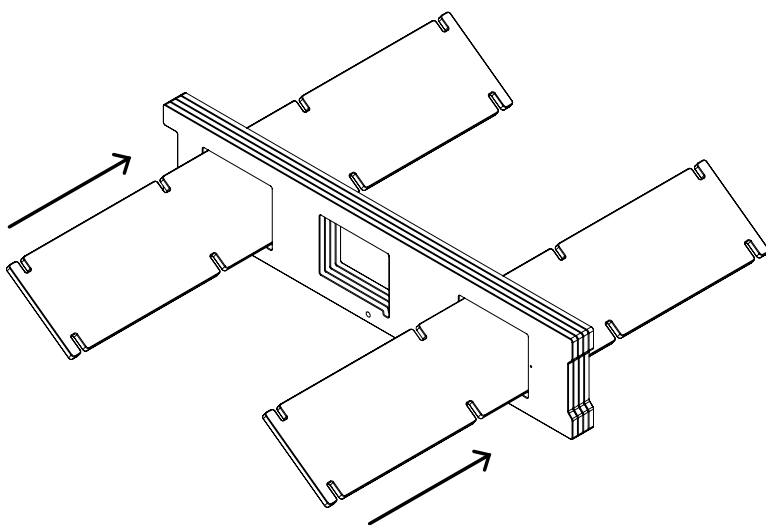



2.

Insert two of the horizontal shelves into the top and bottom compartments of the vertical uprights, respectively, to assemble the inner frame.

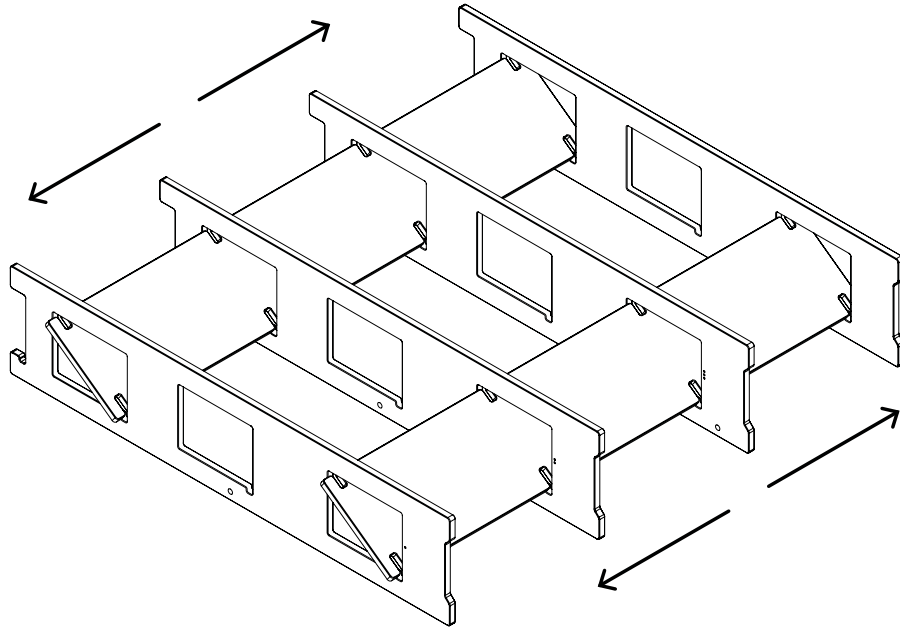

3.


Carefully pull the vertical uprights apart to make room for the inner compartments.

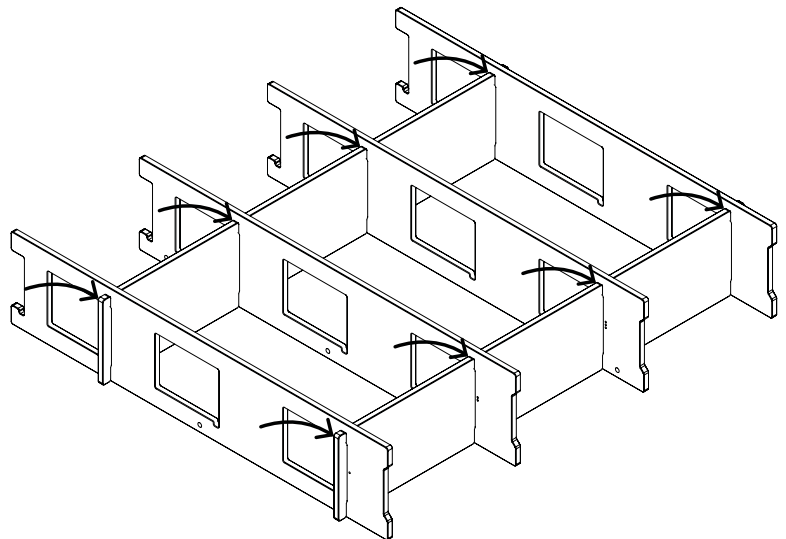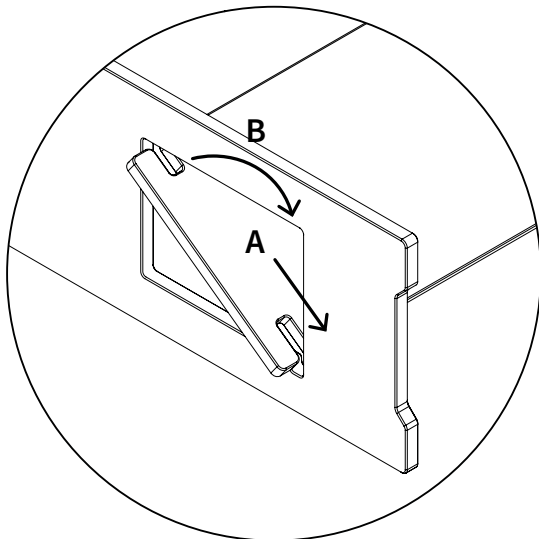

4.



Slide the horizontal shelf diagonally through the opening of the vertical uprights (A).

Then straighten the horizontal shelf and press it firmly downward into the recess until it securely clicks into place (B).

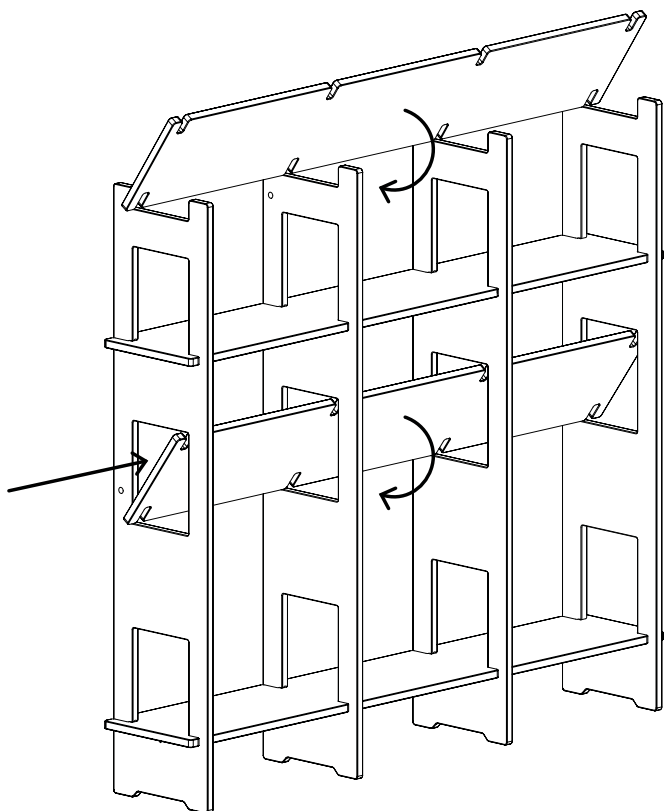


5.

Carefully raise the shelving unit into an upright position. Insert the remaining horizontal shelves one by one into the existing frame. Make sure all parts slide fully into place to ensure a flush and stable connection.

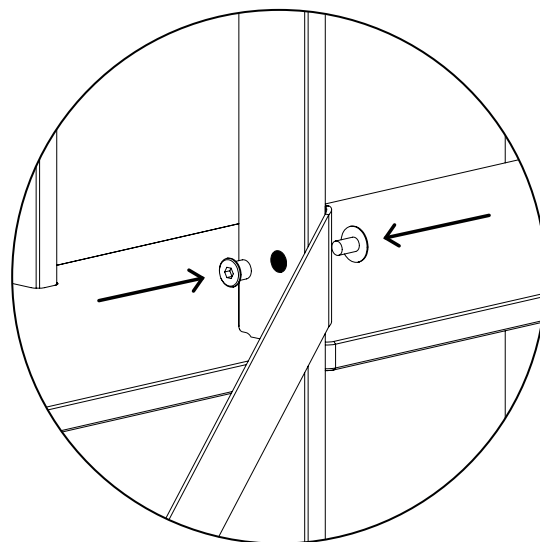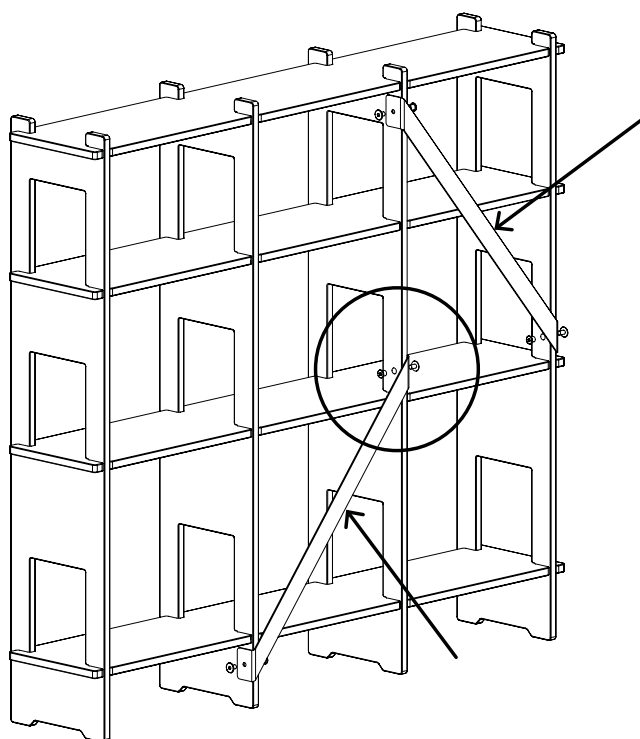

6.

Secure the diagonal struts at the back using the screws, as shown in the illustration, with the Allen key. This will ensure the shelf is stable and stands perfectly straight.

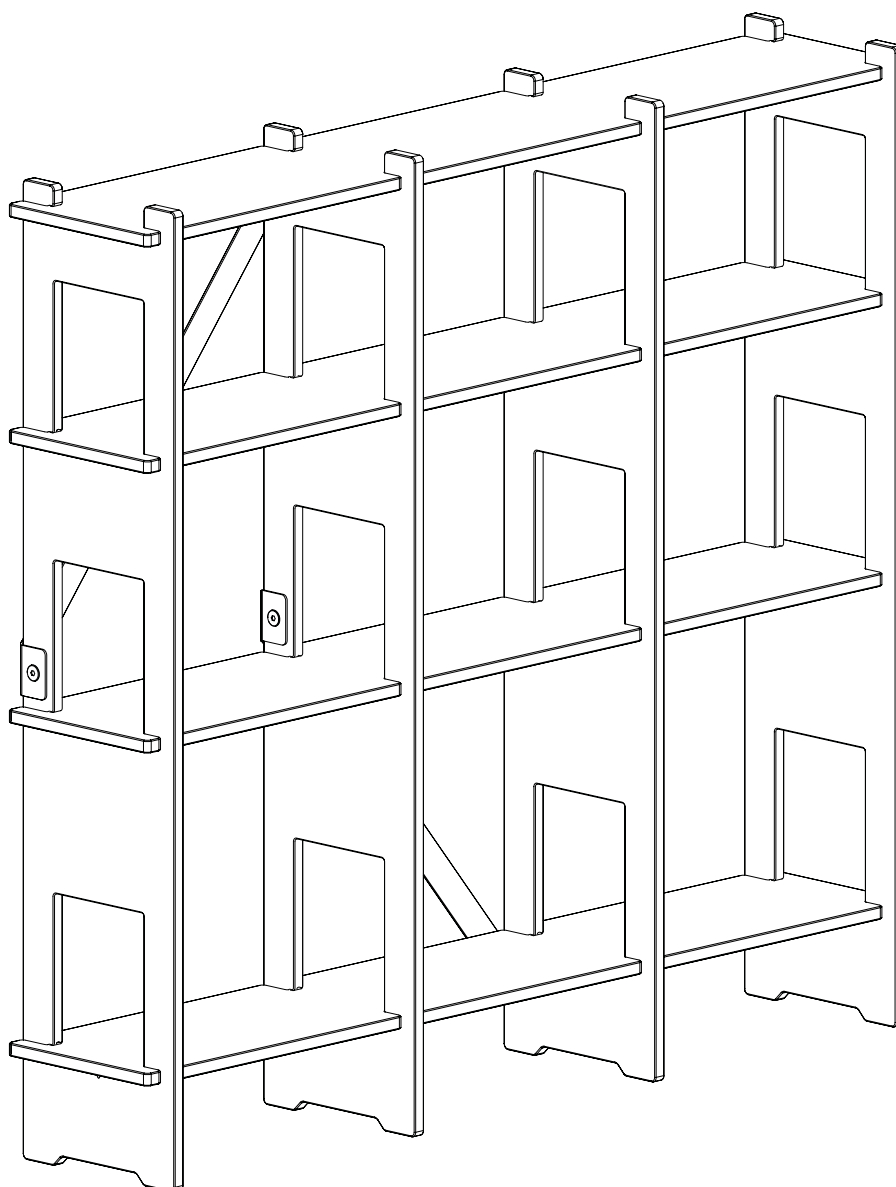

7.

The shelf is now ready for use!

If a click-in shelf in sizes 6:2, 6:3 or 6:4 has been ordered, it can be fixed to the wall using the anti tilt brackets supplied, if required (see page 2 for further information).

Got more questions?

You can reach our customer service team on **+49 (0)30 232 56 01 80** or at **service@stocubo.de**